


# BMW F900XR/R'20-

## MOUNTING INSTRUCTIONS

REF 20544

**GUARDABARROS TRASERO / REAR MUDGUARD**



| ID. | PIEZA/PART | DESCRIPCIÓN   | DESCRIPTION   | QTY. | REF.:           |
|-----|------------|---|---|------|-----------------|
| 1   |            | Guardabarros  | Mudguard  | 1    | 20544J/CM3      |
| 2   |            | Soporte   | Support   | 1    | SOPORIP2--544   |
| 3   |            | Tuerca enjaulada de aluminio M6 (Se suministra montada)           | Lock nut M6 (Supplied mounted)                            | 2    | TUERCAJFM6--319 |
| 4   |            | Tornillo Allen M6x20 Ø14 ISO7380                                  | M6x20 Ø14 ISO7380 Allen screw                             | 2    | TORNI-I7380-404 |
| 5   |            | Tornillo Allen M6x16 Ø14 ISO7380                                  | M6x16 Ø14 ISO7380 Allen screw                             | 3    | TORNI-I7380-403 |
| 6   |            | Tornillo especial M6x14 Long Hexagonal 13 (Rosca int M5x10)       | M6x14 special screw Hexagonal length 13 (Rosca int M5x10) | 1    | TORNI-EM6---772 |
| 7   |            | Tornillo allen M5x16 Ø11 ISO 7380                                 | M5x16 Ø11 ISO 7380 Allen screw                            | 1    | TORNI-I7380-493 |
| 8   |            | Arandela de nylon M6  | M6 Nylon Washer   | 1    | ARANDEPNVCN0246 |
| 9   |            | Tapón tornillo M5   | M5 screw cap  | 1    | TAPON-----85    |
| 10  |            | Tapón tornillo M6   | M6 screw cap  | 4    | TAPON-----86    |
| 11  |            | Silentblock Ø18x Ø9 xØ11 x8                                       | Ø18x Ø9 xØ11 x8 silentblock                               | 5    | SILENBGONE--064 |
| 12  |            | Casquillo con valona Ø15 xØ9 x7,5                                 | Ø15 xØ9 x7,5 bush with flange                             | 5    | CASQUI-1A---324 |
| 13  |            | Espuma adhesiva protectora 10x15mm (Se suministra montado en ID2) | Protect adhesive foam 10x15mm (Supplied mounted on ID2)   | 2    | ESPUMA-----264  |


# BMW F900XR/R'20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

**1**

DISASSEMBLY  
DESMONTAJE


**A** Tornillería original  
Original screws

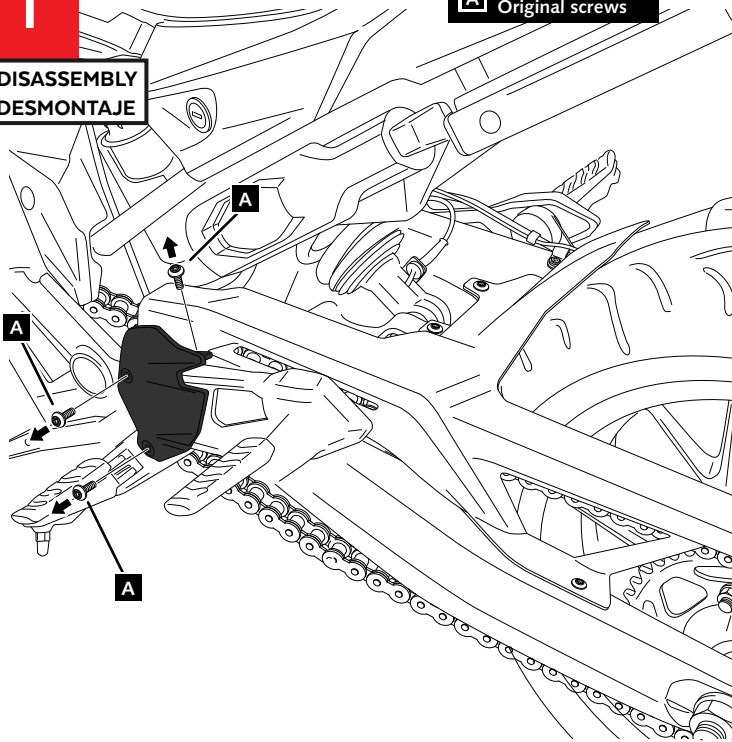

**2**

DISASSEMBLY  
DESMONTAJE


**A** Tornillería original  
Original screws

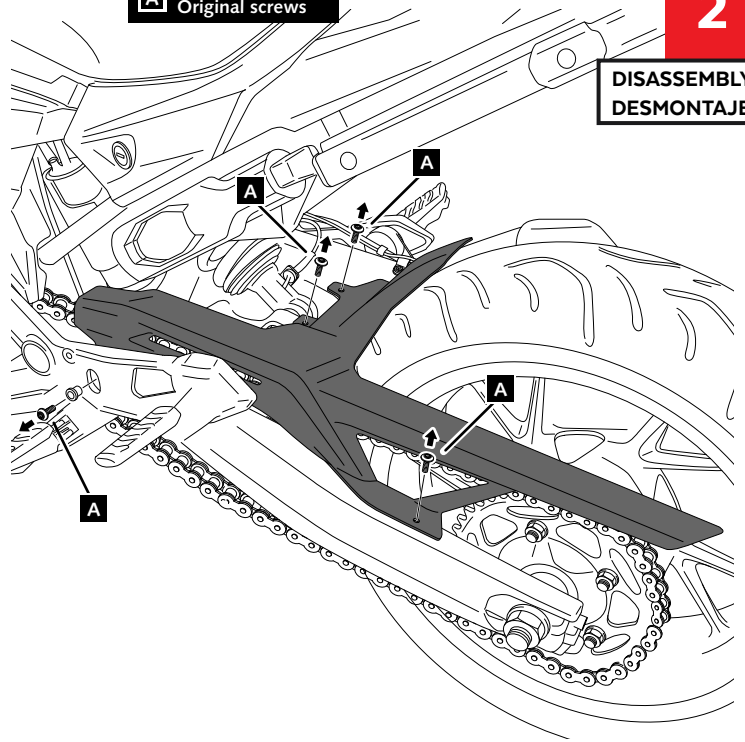

**3**

DISASSEMBLY  
DESMONTAJE


**A** Tornillería original  
Original screws

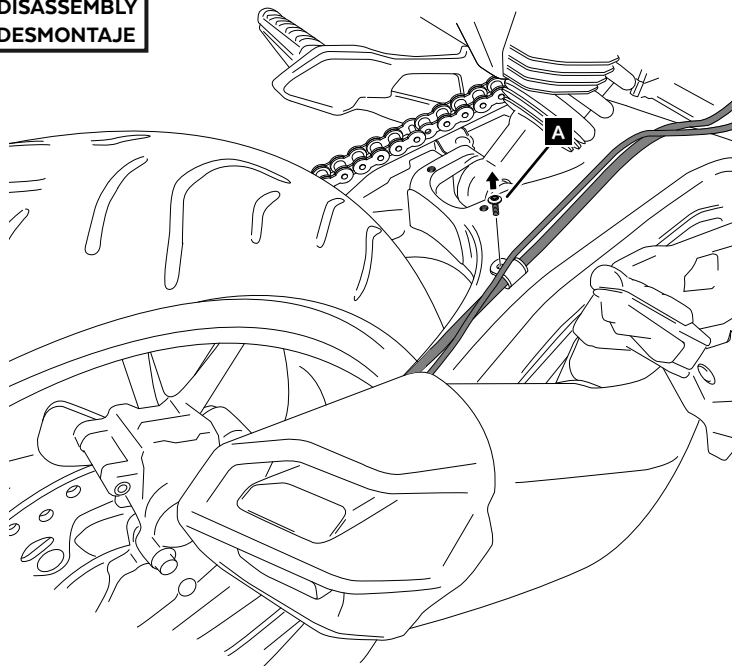

**4**

ASSEMBLY  
MONTAJE

**A** Tornillería original  
Original screws

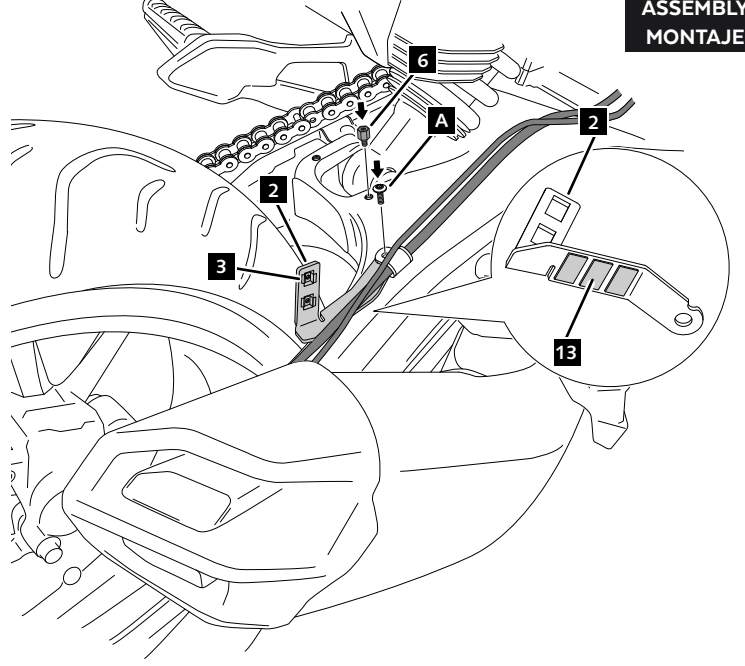


# BMW F900XR/R'20-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**5**

ASSEMBLY  
MONTAJE

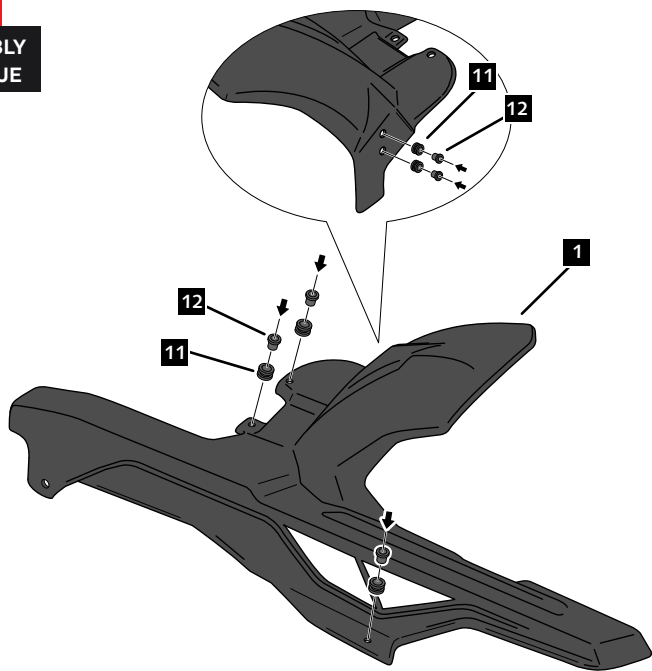


**6**

ASSEMBLY  
MONTAJE

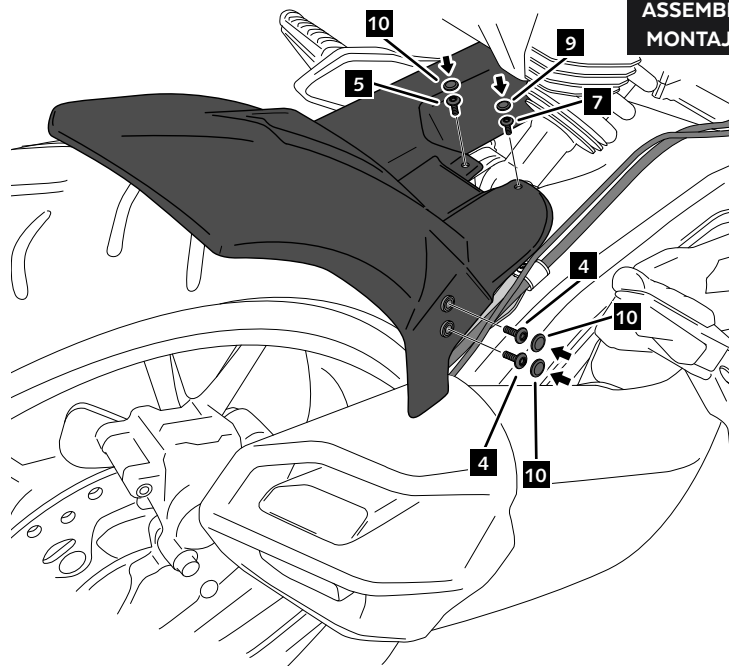

**7**

ASSEMBLY  
MONTAJE

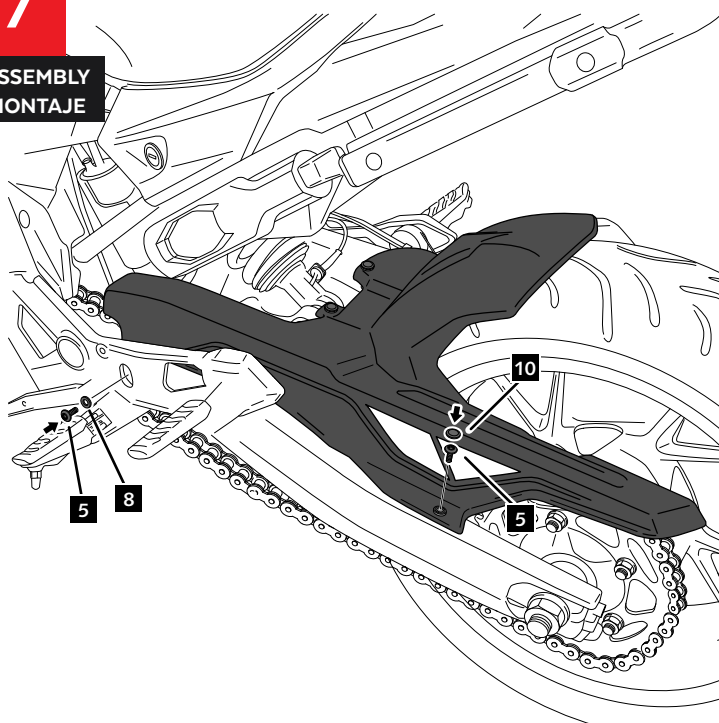

**8**

ASSEMBLY  
MONTAJE

