

YAMAHA MT09 '21-

M O U N T I N G I N S T R U C T I O N S

REF 20645

CARENABRÍS NG TOURING / WINDSHIELD NG TOURING



1 Person



15 min











EASY



ALLEN

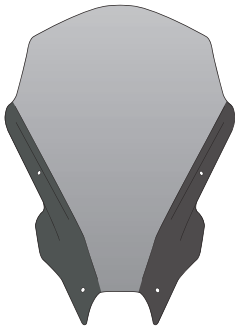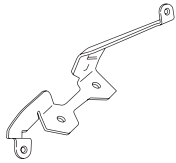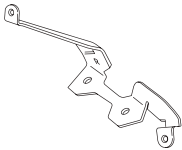Nº 3
Nº 4
Nº 5




| ID | PIEZA/PART | DESCRIPCIÓN | DESCRIPTION | QTY | REF |
|----|---|-----------------------------------|--------------------------------|-----|-----------------|
| 1 |  | Cúpula Touring | Touring screen | 1 | 20645F/H/W/NM3 |
| 2 |  | Soporte Izquierdo | Left support | 1 | SOPOR2P3-L20644 |
| 3 |  | Soporte derecho | Right support | 1 | SOPOR2P3-R20644 |
| 4 |  | Tornillo Allen M6x16 Ø14 ISO 7380 | M6x16 Ø14 ISO 7380 Allen screw | 4 | TORNI-I7380-403 |
| 5 |  | Silentblock Ø9 xØ6 x8mm | Ø9 xØ6 x8mm Silentblock | 4 | AROPASACABLES-3 |
| 6 |  | Casquillo con valona Ø12xØ6,8x7,3 | Ø12xØ6,8x7,3 bush with flange | 4 | CASQUI-1A---750 |
| 7 |  | Tornillo Allen M5x16 Ø11 ISO 7380 | M5x16 Ø11 ISO 7380 Allen screw | 4 | TORNI-I7380-493 |
| 8 |  | Tapón tornillo M5 ISO 7380 | M5 ISO 7380 screw cap | 4 | TAPON-----85 |

YAMAHA MT09 '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

DISASSEMBLY
DESMONTAJE

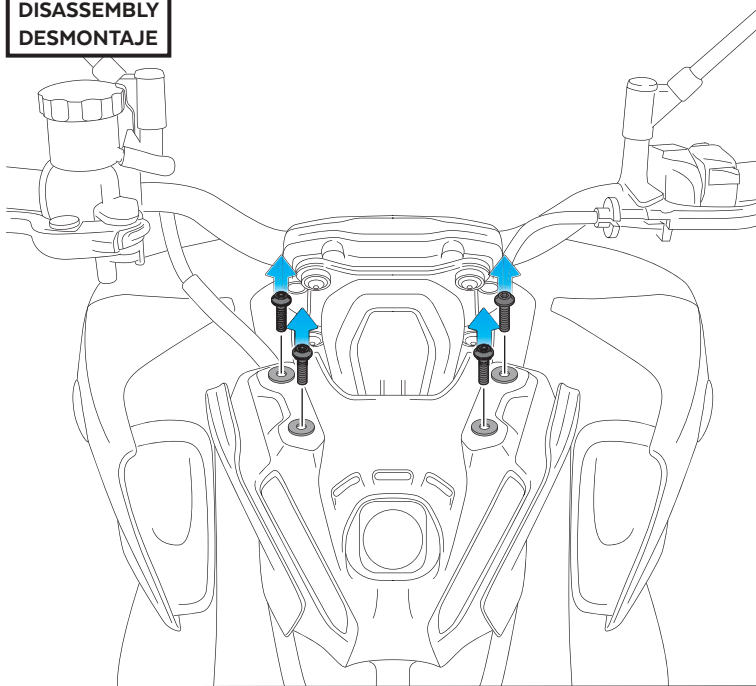



2


ASSEMBLY
MONTAJE

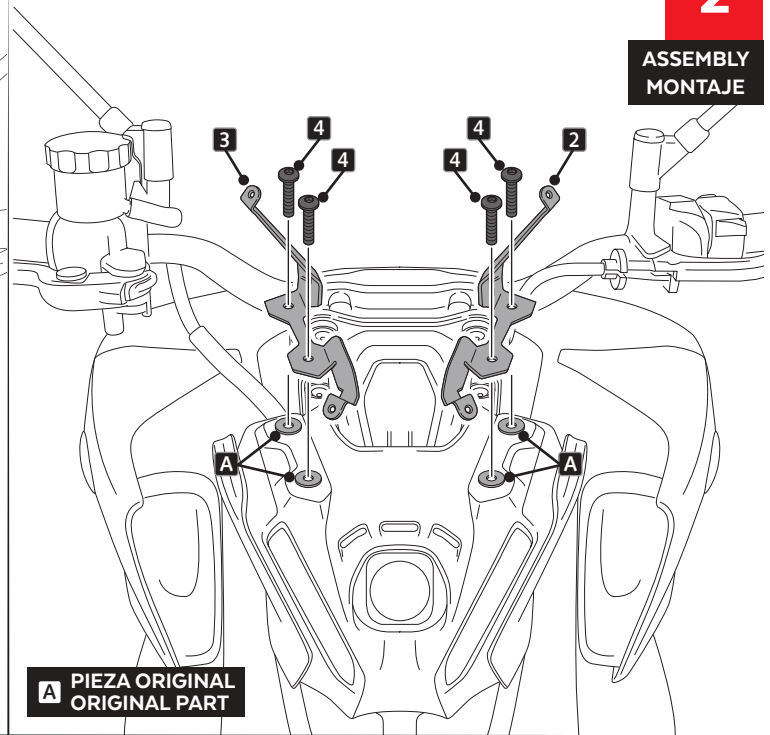

3

ASSEMBLY
MONTAJE

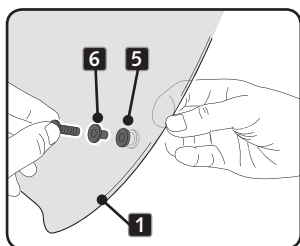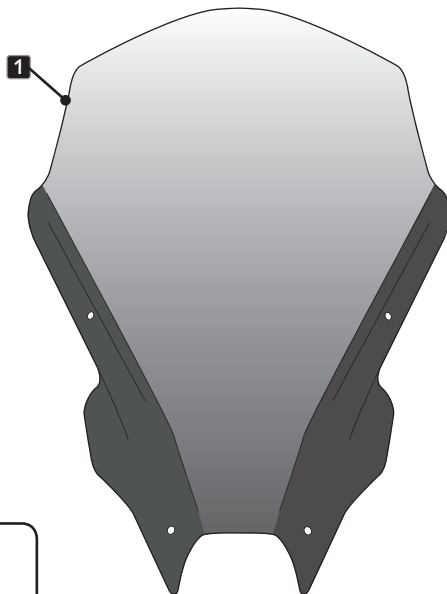

7  Par de apriete - 1,8 Nm
Tightening torque - 1,8Nm

4

ASSEMBLY
MONTAJE

