

## BMW G310GS '17-'19

REF 9949N

GUARDABARROS TRASERO / REAR MUDGUARD / HINTERRADABDECKUNG




1 Person



1 hour



INTERMEDIATE

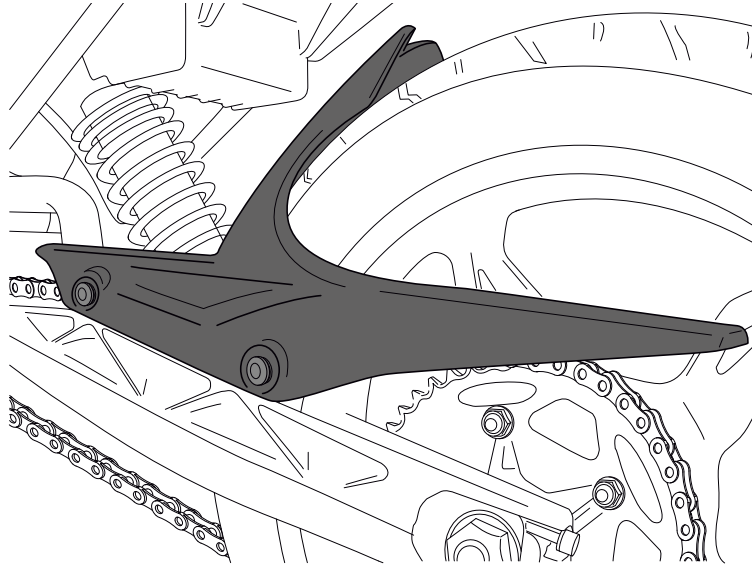

CONSULTAR EN NUESTRA PAGINA WEB LA DISPONIBILIDAD DEL VIDEO DE MONTAJE DE ESTA REFERENCIA.

CONSULT OUR WEBSITE THE VIDEO MOUNT AVAILABILITY OF THIS REFERENCE.




ID.	PIEZA / PART	DESCRIPCIÓN	DESCRIPTION	QTY.	REF.:
1		Guardabarros	Rear mudguard	1	REF.9949
2		Herraje	Iron	1	SOPORT94-4-0094
3		Tornillo M5X10 DIN1001 (Negro)	M5x10 DIN1001 screw (BLACK)	1	TORNI-I7380-536
4		Tornillo M5x15 DIN1001 (Negro)	M5x15 DIN1001 screw (BLACK)	3	TORNI-I7380-493
5		Tornillo M6x15 DIN1001 (Negro)	M6x15 DIN1001 screw (BLACK)	1	TORNI-I7380-403
6		Tornillo M6x10 DIN1001 (Negro)	M6x10 DIN1001 screw (BLACK)	1	TORNI-I7380-402
7		Tuercas enjaulada M6	M6 caged nut	1	TUERCAJFM6--319
8		Tapón plástico cabota M5 DIN1001	M5 DIN1001 plastic cap	4	TAPON-----85
9		Tapón plástico cabota M6 DIN1001	M6 DIN1001 plastic cap	2	TAPON-----86
10		Silenblocks de goma	Silentblock rubber	4	SILENBGONE--064
11		Casquillo metálico	Metallic spacer	4	CASQUI-----0046

# BMW G310GS '17-'19

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


**1**

**DISASSEMBLY  
DESMONTAJE**

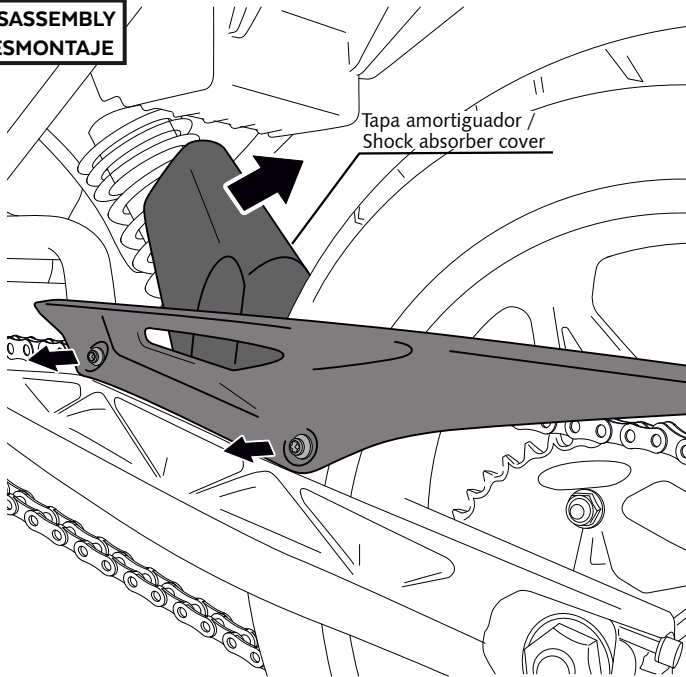


**2**

**ASSEMBLY  
MONTAJE**

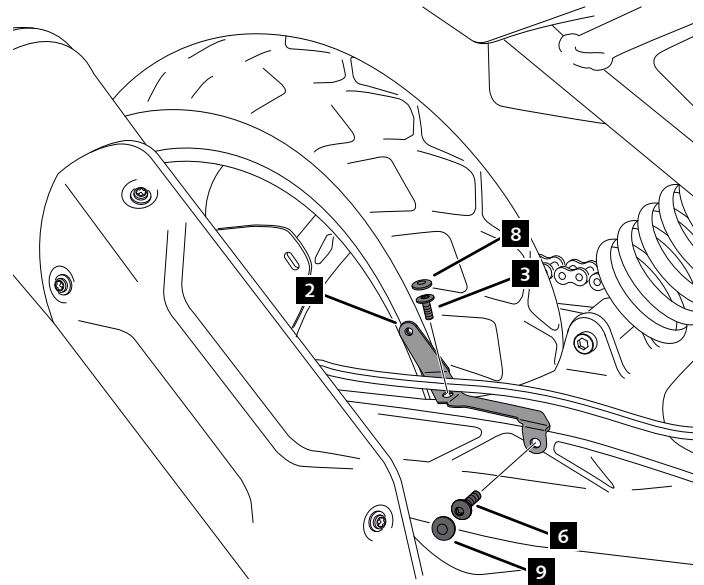

**3**

**ASSEMBLY  
MONTAJE**

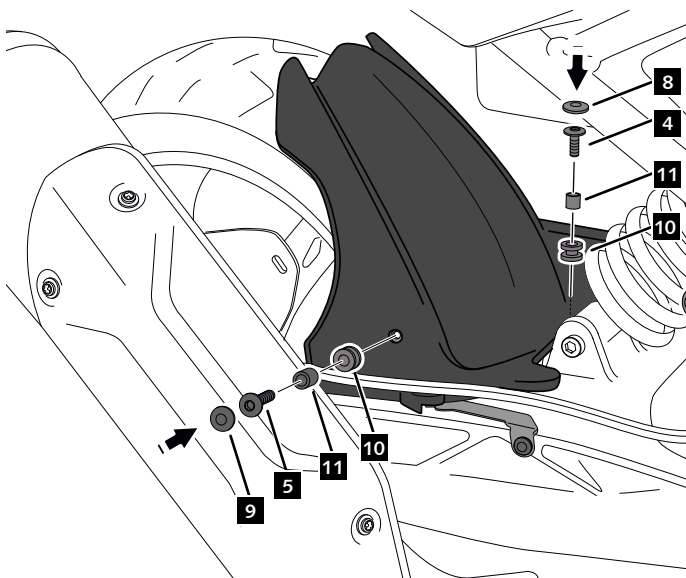

**4**

**ASSEMBLY  
MONTAJE**

